

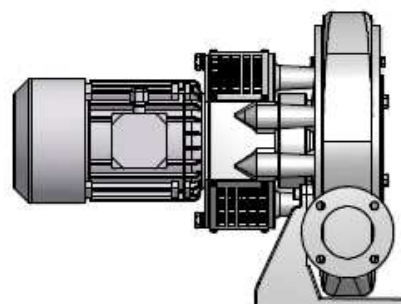
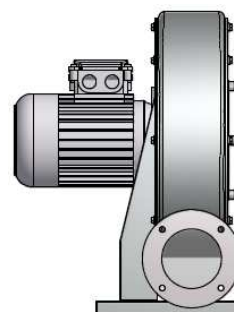


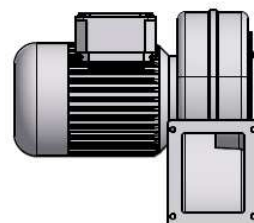

Centrifugal fans

Operating instructions

venetus_class VRN VR VRH

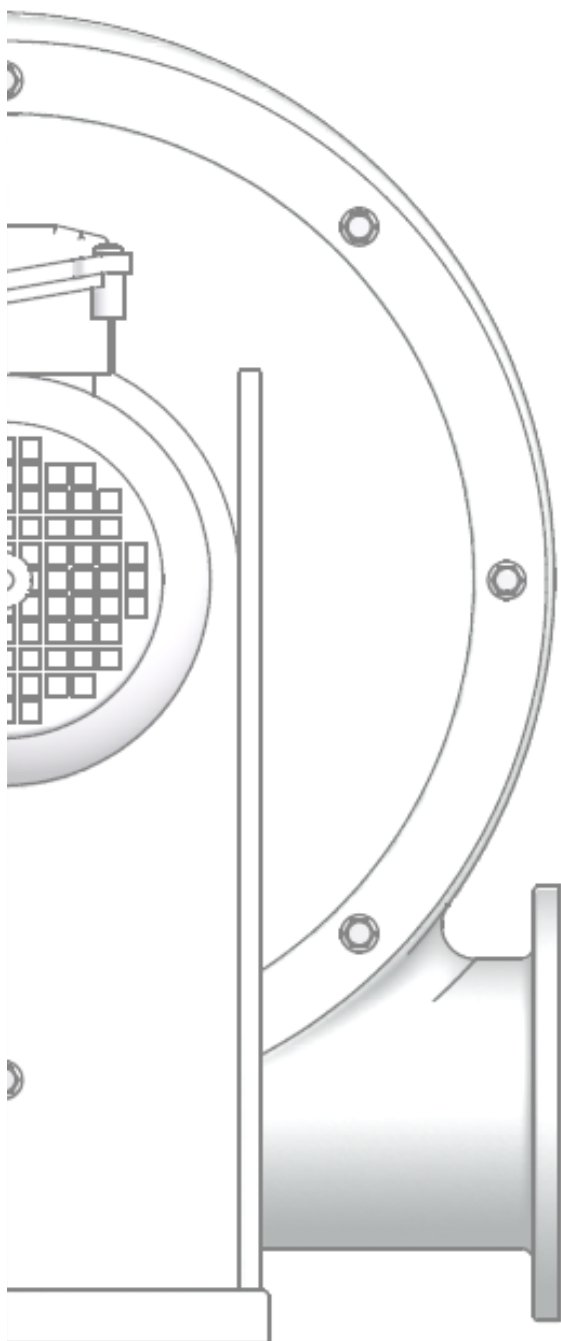

Low pressure fan VRN

Medium pressure fan VR

High pressure fan VRH_T / VRH_G / VRH_FU



Contents

1 Safety

- 1.1 Definitions
 - 1.1.1 Safety alert symbol
 - 1.1.2 Signal words
- 1.2 General safety precautions

2 Intended use

3 Technical data

- 3.1 Mechanical data
- 3.2 Electrical data
- 3.3 Operating conditions

4 Transport and handling

5 Installation

- 5.1 Installation
- 5.2 Electrical connection (motor)
- 5.3 Connecting pipes/hoses
 - 5.3.1 Inlet connection
 - 5.3.2 Discharge connection
 - 5.3.3 Procedure when connecting pipes/hoses

6 Commissioning

- 6.1 Preparation
- 6.2 Start-up and shut-down

7 Operation

8 Shut-down and longer standstills

- 8.1 Preparing for shut-down or longer standstill
- 8.2 Storage conditions

9 Servicing



- 9.1 Emptying/Rinsing/Cleaning
- 9.2 Repairs/troubleshooting
- 9.3 Service/After-sales service

10 Disposal

EU declaration of conformity

Design of centrifugal fan venetus_class

- 1 Vacuum pump/compressor housing
- 2 Vacuum pump/compressor cover
- 3 Inlet connection
- 4 Discharge connection
- 5 Base
- 6 Arrow indicating delivery direction
- 7 Arrow indicating direction of rotation
- 8 Drive motor
- 9 Fan guard (over external fan)
- 10 Terminal box

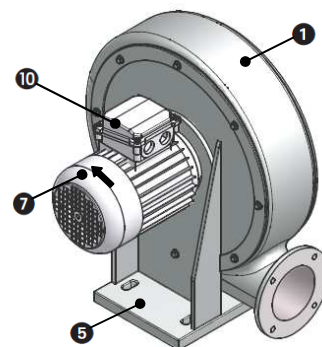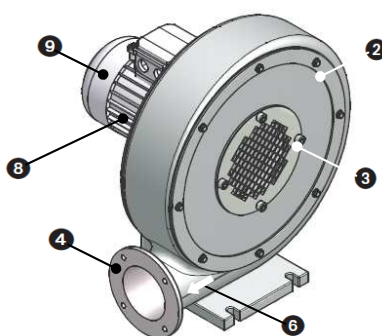



1 Safety

1.1 Definitions

To point out dangers and important information, the following signal words and symbols are used in these operating instructions:

1.1.1 Safety alert symbol



The **safety alert symbol** is located in the safety precautions in the highlighted heading field on the left next to the signal word (DANGER, WARNING, CAUTION).

Safety precautions **with** a safety alert symbol indicate a danger of **injuries**.

Be sure to follow these safety precautions to protect against **injuries or death**!

Safety precautions **without** a safety alert symbol indicate a danger of **damage**.

1.1.2 Signal words



DANGER



WARNING



NOTICE



Danger of injuries. Indicates an imminently hazardous situation, that will result in death or serious injury if the corresponding measures are not taken.



Danger of injuries. Indicates a potentially hazardous situation, which could result in death or serious injury if the corresponding measures are not taken.

Danger of injuries. Indicates a potentially hazardous situation, which may result in minor or moderate injury if the corresponding measures are not taken.

Danger of damage. Indicates a potentially hazardous situation, which may result in property damage if the corresponding measures are not taken.



Indicates a possible **disadvantage**, i.e. undesirable conditions or consequences can occur if the corresponding measures are not taken.

Indicates possible advantages if the corresponding measures are taken; tip.



1.2 General safety precautions



Improper use of the unit can result in serious or even fatal injuries! All work on and with the pump-motor unit (transport, installation, operation, shut-down, maintenance, disposal) may only be carried out by trained, reliable expert personnel!



When working on the unit, there is a danger of injury, e.g. in the form of cuts/cutting off, crushing and burns! During all work on and with the pump-motor unit (transport, installation, operation, shut-down, maintenance, disposal) wear personal safety equipment (safety helmet, protective gloves, safety shoes)!



Hair and clothing can be pulled into the unit or caught and wound up moving parts! Do not wear long, loose hair or wide, loose clothes! Use a hair net!



Electrical danger! Work on electrical installations may be carried out by trained and authorized electricians only!



Electrical danger!

Before beginning work on the unit or system, the following measures must be carried out:

- ☐ Deenergize.
- ☐ Secure against being switched on again.
- ☐ Determine whether deenergized.
- ☐ Ground and short-circuit.
- ☐ Cover or block off adjacent energized parts.



Electrical danger!

Do not open the motor terminal box until absence of electricity has been ensured!



Danger due to vacuum and gauge pressure:

sudden escape of fluids (skin and eye injuries), sudden drawing in of hair and clothing!

Danger due to escaping fluid: Burns! Use mounting elements, connections, lines, fittings and containers with sufficient freedom from leaks and strength for the pressures which occur. Check the mounting elements, connections, lines, fittings and containers for strength, leaks and firm seating at regular intervals!



Danger from rotating parts (external fan, impeller, shaft): Cutting/cutting off of extremities, Grasping/winding up of hair and clothing!

Danger due to vacuum and gauge pressure: sudden escape of fluids (skin and eye injuries), sudden drawing in of hair and clothing! Danger due to escaping fluid: Burns!

Start-up and operation only under the following conditions:

- ☐ The pipes/hoses must be connected to inlet and discharge connections.
- ☐ Inlet and discharge connections and the connected pipes/hoses may not be closed, clogged or soiled.
- ☐ Check the mounting elements, connections of the pipe/hose connections, lines, fittings and containers for strength, leaks and firm seating at regular intervals!



Danger from rotating impeller: Cutting/cutting off of extremities!

The rotating impeller is accessible with the inlet and discharge connections open!

With free entry and exit of gases, i.e. with direct intake out of or direct feeding into the atmosphere without piping, the following therefore applies:

Provide the inlet and discharge connections of the pump-motor unit either with additional mufflers or with additional piping of a sufficient length to prevent access to the impeller!



Danger of burns from hot surfaces of the pump-motor unit and from hot fluids!

High temperatures of up to approx. 160°C [320°F] can occur on the surface of the pumpmotor unit. Cover the pump-motor unit with a suitable touch protection (e.g. perforated plate cover or wire cover). Do not touch during operation! Allow to cool after shut-down!



2 Intended use



This operating manual

- ☐ is intended for centrifugal fans of the ventus class, VR_series (VR_venetus),
- ☐ contains instructions bearing on transport and handling, installation, commissioning, operation, shut-down, storage, servicing and disposal of the VR_venetus,
- ☐ must be completely read and understood by all operating and servicing personnel before beginning to work with or on the VR_venetus,
- ☐ must be strictly observed,
- ☐ must be available at the site of operation of the VR_venetus.

About the operating and servicing personnel of the VR_venetus

- ☐ These persons must be trained and authorized for the work to be carried out.
- ☐ Work on electrical installations may be carried out by trained and authorized electricians only.

The VR_venetus

- ☐ are pump-motor units for generating vacuum or gauge pressure;
- ☐ are used to **extract, pump and compress the following gases:**
 - Air,
 - Non-flammable, non-aggressive, non-toxic and non-explosive gases or gas-air mixtures.
 - With differing gases/gas-air mixtures, inquire with the Service Department.

- ☐ are equipped with one of the following kind of drive motors:
 - 3-phase AC drive motor with a standard design
 - Single-phase AC drive motor
- ☐ are intended for industrial applications,
- ☐ are designed for continuous operation.

With increased switch-on frequency (6x per hour with equal pauses and operating times) or with increased gas inflow and ambient temperature, the excess temperature limit of the coil and the bearing can be exceeded.
Consult WETRAVENT when using under such conditions.

Foreseeable misuse

- ☐ to use the VR_venetus in applications other than industrial applications unless the necessary protection is provided on the system, e.g. guards suitable for children's fingers;
- ☐ to use the device in rooms in which explosive gases can occur if the VR_venetus is not expressly intended for this purpose;
- ☐ to extract, to deliver and to compress explosive, flammable, corrosive or toxic fluids, unless the VR_venetus is specifically designed for this purpose;

Any unauthorized modifications of the VR_venetus are prohibited for safety reasons.

The operator is only permitted to perform the maintenance and service work described in these operating instructions. Maintenance and servicing work which goes beyond this may only be carried out by companies which have been authorised by the manufacturer (ask the WETRAVENT service department for details).




3 Technical data

3.1 Mechanical data

See rating plate.

Minimum distances:

Minimum distance to fan guard (for sucking in cooling air) ⑨ :

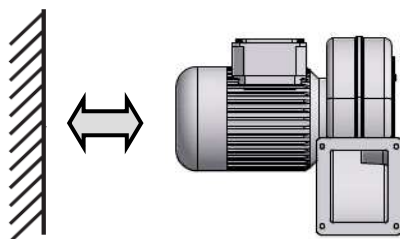


Type	[mm]
≤ 2 kW	40
2.2 – 3.8 kW	50
≥ 4 kW	60

3.2 Electrical data

See rating plate.

Modell		IP	TH.CL. F	μF	kg
~ Mot EN 60034		Seriennummer			
50Hz	kW	Δ	–	V	A - mbar
/ min		Y	–	V	A - mbar
60Hz	kW	Δ	–	V	A - mbar
/ min		Y	–	V	A - mbar
max 87Hz					
WETRAVENT Lufttechnik D-73765 Neuhausen -Germany					



Rating plate

3.3 Operating conditions

Temperatures

Temperature of pumped gases:

max. permissible temperature: +45°C

Nominal value : +15°C

Temperature of pumped gases: Pump-motor units for higher fluid temperatures on request.

Ambient temperature:

max. permissible temperature: +40°C

min. permissible temperature: -20°C

Nominal value: +25°C

Ambient temperatures between 25°C and 40°C affect the permissible total pressure difference. At higher temperatures the winding may be damaged and the grease change interval may be shortened.

Pressures

Permitted total pressure difference: See rating plate.

The total pressure difference, shown on the rating plate, applies only for the following conditions:

- ☐ Ambient temperature: 25°C
- ☐ Pressure for vacuum operation: 1013 mbar at pressure connection;
- ☐ Pressure for compressor operation: 1013 mbar at suction connection;
- ☐ Intake temperature (temperature of conveyed gases at suction connection): 20°C

For ambient temperatures between 25°C and 40°C, the total pressure difference specified on the rating plate must be reduced (at 40°C by 10%).

Consultation with WETRAVENT is essential for such operational conditions. (www.wetravent.com).

Installation altitude: Max. of 1,000 m [3,280 ft] above sea level.

When installing the pump-motor unit at an altitude of more than 1,000 m [3,280 ft] above sea level, first inquire with the Service department (www.wetravent.com).



4 Transport and Handling



Tipping or falling can lead to crushing, broken bones etc.! Sharp edges can cause cuts!
Wear personal safety equipment (gloves, safety shoes and protective helmet) during transport!

Danger from tipping or falling loads!

Prior to transport and handling make sure that all components are securely assembled and secure or remove all components the fasteners of which have been loosened!

The transport must be carried out in different ways depending on the type:

- WT1 – WT5 (single-impeller): Manual handling
- WT5. (two-impeller), WT6 – WT9: Transport with crane, hooked onto eye bolt/lifting attachment (1 attachment point).

Eye bolt/lifting attachment:



Types with a weight of up to 30 kg [66 lbs] are **not** equipped with an eye bolt/lifting attachment.

Types with a weight of more than 30 kg [66 lbs] are equipped with an eye bolt/lifting attachment as **standard**.

In case of possible removal and remounting of the eye bolt, it must be ensured that the eye level is positioned exactly in the axis direction of the pump-motor unit. Lay shims under the eye bolt if necessary.

The eye bolt/lifting attachment must be firmly tightened.

Loads laterally to the ring level are not permissible. Heavy impact loads during transport must be avoided.

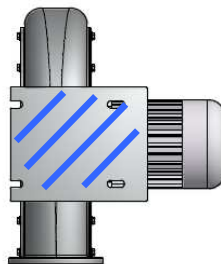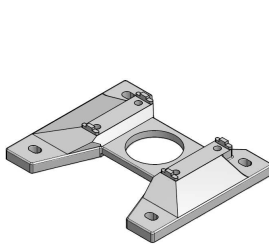

Base plate just for transport purpose





5 Installation



Electrical danger! The pump-motor unit must be installed so that the electrical device cannot be damaged by external influences! In particular, the feed pipes must be securely routed, e.g. in cable ducts, in the floor etc.



Danger from crushing due to pump-motor unit tipping over! Wear personal safety equipment (protective gloves and safety shoes). Handle the unit with the appropriate care. Install the pump-motor unit on a solid foundation or on a solid mounting surface! Check screw glands/unions for mounting the pump-motor unit on the mounting surface regularly for strength.



Danger of fire from flammable substances! The pump-motor unit must never come into contact with flammable substances.



Danger of burns from hot surfaces of the pump-motor unit and from hot fluids! High temperatures of up to approx. 160°C [320°F] can occur on the surface of the pumpmotor unit. The pump-motor unit must be installed so that accidental touch of its surface is not possible. Cover the pump-motor unit with a suitable touch protection (e.g. perforated plate cover or wire cover).



Danger of injuries from flying parts! Select installations so that parts that are thrown out through the grate if the external fan breaks cannot hit persons!



Danger of overheating due to hot surface of pump-motor unit! High temperatures can occur on the surface of the pump-motor unit. Temperature sensitive parts, such as lines or electronic components, may not come into contact with the surface of the pump-motor unit.

Carry out the following work to install the pump motor unit:

- ☐ Installation and securing,
- ☐ Attachment of the included loose muffler if necessary,
- ☐ Attachment of threaded flange or hose flange (available as accessories) for the connection of inlet or discharge pipe to the fan housing connections,
- ☐ Electrical connection,
- ☐ Connection of inlet and discharge connection to the system.

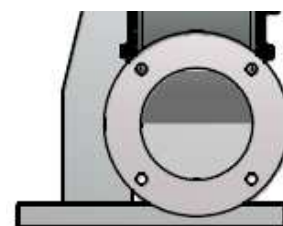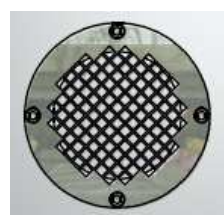



5.1 Installation



For an installation that differs from the following specifications, it is necessary to inquire with the Service Department!

Ambient conditions:

The pump-motor unit is suitable for installation in the following environments:

- ☐ In a dusty or damp environment,
- ☐ in buildings,
- ☐ in the open.

When properly installed in the open, the pump-motor unit must be protected from exposure to intensive sunlight, e.g. by attaching a protective roof. Otherwise, no special protective devices against the effects of weathering are required.

The drive motors of the pump-motor units have the following design:

- ☐ with degree of protection IP55 (see rating plate).

Installation conditions:

The pump-motor unit must be installed as follows:

- ☐ on level surfaces,
- ☐ at a maximum height of 1000 m [3280 ft] above sea level.

When installing at an altitude of more than 1,000 m [3,280 ft] above sea level, first inquire with the service department.



To ensure sufficient cooling of the pump-motor unit, also observe the following:

- ☐ **Ventilation screens and openings must remain clear.**
- ☐ **Discharge air of other units may not be directly sucked in again!**

Noise radiation:

To reduce the noise radiation, the following must be observed:


- ☐ Do not mount pump-motor unit on noise conducting or noise-radiating parts (e.g. thin walls or sheet-metal plates).
- ☐ Provide pump-motor unit with sound insulating intermediate layers (e.g. rubber buffers under the base of the pump-motor unit) if necessary.
- ☐ Install the pump-motor unit on a stable foundation or on a rigid mounting surface. This provides for smooth, low-vibration running of the pump-motor unit.



Components for reducing noise on the pump motor unit:

- ☐ **Additional silencer** (available as an accessory for the VR_venetus):

The additional mufflers enable a further noise reduction. They may only be used with free entry and exit of gases, i.e. with direct intake out of or direct feeding into the atmosphere without piping.

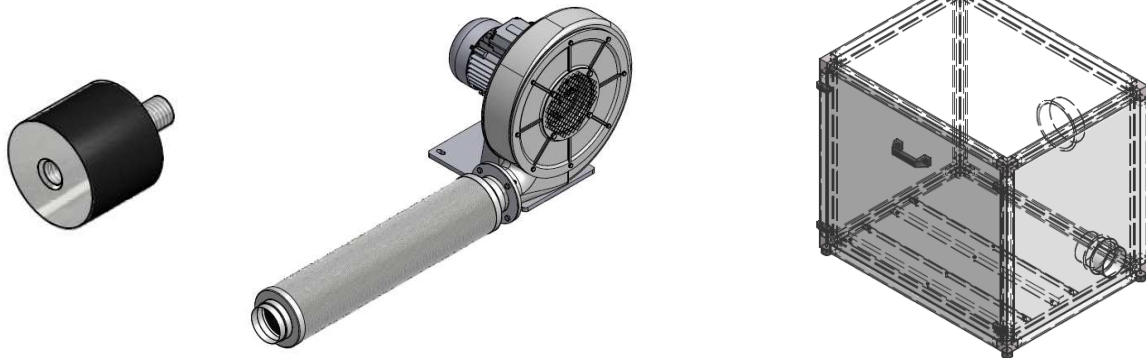

- ☐ **Sound protection hood** (available as an accessory for the VR_venetus):

Noise protection hoods are suitable for installation in rooms and in the open. They reduce both the total sound pressure level and tonal components that are perceived as particularly annoying.




Installation variants/axis position:

Basically, when installing the pump-motor unit, the following variants are possible with a different axis position (horizontal or vertical):

- ☐ Horizontal installation
- ☐ Vertical installation on the vacuum pump/compressor cover ("cover installation")
- ☐ Vertical mounting on the wall

Basically, all variants are possible with all type.

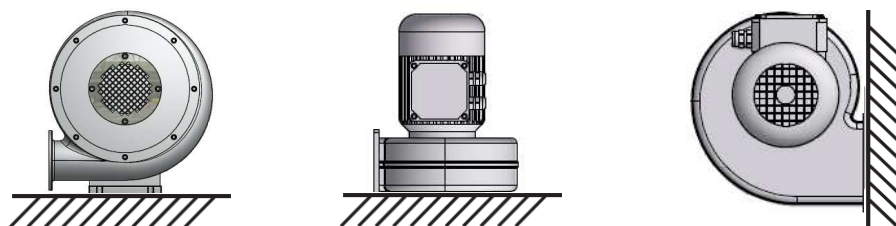

Horizontal axis mounting

The foot of the unit has fastening holes.

- ☐ Screw the foot of the unit to the base using suitable screws. **All** fastening holes must have screws!

Vertical axis mounting on the compressor cover ("cover position")

For vertical axis mounting on the compressor cover, use spring elements. Spring elements are available as accessories. The upper part has a threaded stud and the lower part a threaded hole.

- ☐ Fastening spring elements to the unit:

Screw threaded studs of the spring elements into the holes on the front side of the compressor cover and tighten.

- ☐ Fastening the unit with spring elements to the foundation:

Select suitable fastening elements for the threaded hole. Screw spring elements over the threaded hole into the base or foundation.

Vertical axis mounting on the wall with the compressor covers pointing downward

For vertical axis mounting of the unit on the wall, the unit is fastened using the holes in the foot. The foot of the unit has fastening holes.

- ☐ Place the unit with the foot to the wall on a base plate with sufficient load-bearing capability in the mounting position.
- ☐ Screw the foot of the unit to the wall using suitable screws. **All** fastening holes must have screws!
- ☐ Remove the base plate.



5.2 Electrical connection (motor)



Electrical danger! Malpractice can result in severe injuries and material damage!

Electrical danger! The electrical connection may be carried out by trained and authorized electricians only!

Electrical danger! Before beginning work on the unit or system, the following measures must be carried out:

- ☐ Deenergize.
- ☐ Secure against being switched on again.
- ☐ Determine whether deenergized.
- ☐ Ground and short-circuit.
- ☐ Cover or block off adjacent energized parts



Incorrect connection of the motor can lead to serious damage to the unit!

Regulations:

The electrical connection must be carried out as follows:

- ☐ according to the applicable national and local laws and regulations,
- ☐ according to the applicable system-dependent prescriptions and requirements,
- ☐ according to the applicable regulations of the utility company.

Electrical power supply:

Observe the **rating plate**. It is imperative that the operating conditions correspond to the data given on the rating plate!

Deviations permissible without reduction in performance:

- ☐ ± 5 % voltage deviation
- ☐ ± 2 % frequency deviation


 
Connection to drive-motor terminal box:

Open the required cable entry openings on the terminal box. Here the following two cases are differentiated:

- ☐ The cable entry opening is prefabricated and provided with a sealing plug.
- ☐ Screw out sealing plug.

OR

- ☐ The cable entry opening is closed off with a casting skin.
- ☐ Break out casting skin using a suitable tool. For example, use a metal pin with a corresponding diameter or a chisel and hammer.

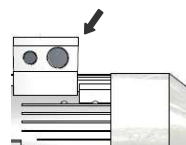

When pounding out the casting skin on the cable entry openings in the terminal box, the terminal box or its parts can be damaged (e.g. terminal board, cable connections). Proceed with suitable caution and precision when doing so! Prevent flash formation!

Mount cable glands on the terminal box. Proceed as follows:

- ☐ Select one cable gland in each case which is suitable for the cable diameter.
- ☐ Insert this cable gland in the opening of the terminal box. Use a reducer if necessary.
- ☐ Screw on the cable gland so that no moisture, dirt etc. can penetrate into the terminal box.

Carry out the connection and the arrangement of the jumpers in accordance with the **circuit diagram in the terminal box**.

Connect the protective conductor to the terminal with the following symbol:



The electrical connection must be carried out as follows:

- ☐ The electrical connection must be permanently safe.
- ☐ There may be no protruding wire ends.
- ☐ Clearance between bare live parts and between bare live parts and ground: $\geq 5.5 \text{ mm}$ [0.217"] (at a nominal voltage of $UN \leq 690V$).
- ☐ For the tightening torques for terminal board connections (except terminal strips).
- ☐ For terminals with clamping straps, the conductors must be inserted so that approximately the same clamping height results on both sides of the bar. Individual conductors must therefore be bent into a U-shape or connected with a cable lug.

This also applies to:

- ☐ the protective conductor,
- ☐ the outer ground conductor.



Electrical danger! The terminal box must be free from

- ☐ foreign bodies,
- ☐ dirt,
- ☐ humidity.

Terminal box cover and cable entries must be tightly closed so as to make them dustproof and waterproof. Check for tightness at regular intervals.

For motor overload protection:

- ☐ Use motor circuit breakers.
- ☐ This must be adjusted to the specified nominal current (see rating plate).



Electrical danger! There is danger of an electrical shock when a defective pump-motor unit is touched! Mount motor circuit breaker. Have electrical equipment checked regularly by an electrician.

Interference immunity of drive motor:


For drive motors with integrated sensors, the operator must provide for sufficient interference immunity itself. Select a suitable sensor signal cable (e.g. with screening, connection as for a motor power-supply cable) and analyzing unit.



Operation with frequency converter:

With a power supply by a frequency converter, the following must be observed:

- ☐ High-frequency current and voltage harmonics in the motor supply cables can lead to emitted electromagnetic interference. This is dependent on the converter design (type, manufacturer, interference suppression measures).
- ☐ Be sure to observe the EMC notes of the converter manufacturer!
- ☐ Use screened power supply cables if necessary. For optimal screening, the screen must be conductively connected over a large area to the metal terminal box of the drive motor with a screwed metal gland.
- ☐ In the case of drive motors with integrated sensors (e.g. PTC thermistors) interference voltage can occur on the sensor cable depending on the converter type.
- ☐ Limit speed: see specifications on the rating plate.



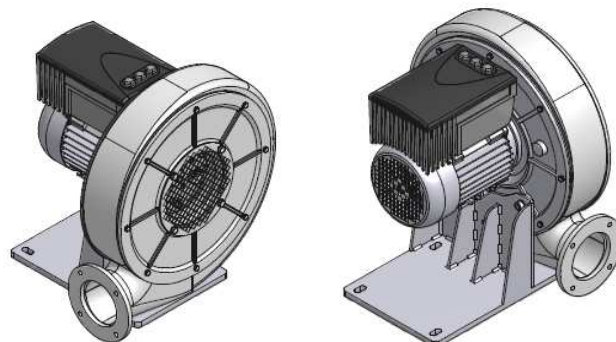


5.3 Connecting pipes / hoses

Low pressure fan VRN

VRN_class



VRN3 – VRN92

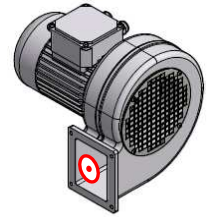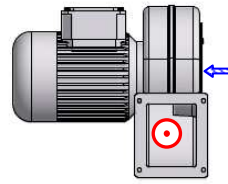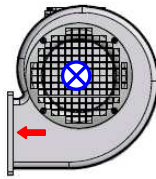

Medium pressure fan VR

VR_class

VR100 – VR850

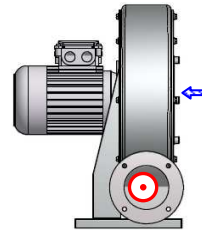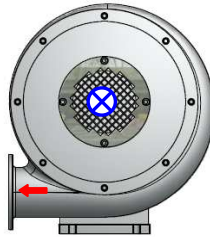




High pressure fan VRH

Designed for V-belt drive

VRH_class

VRH25_T – VRH400_T

VRH100_G – VRH400_G
(including base plate)




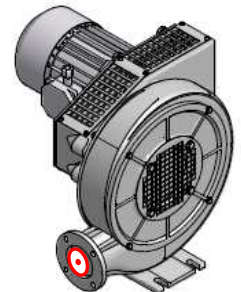
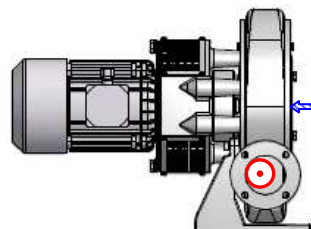
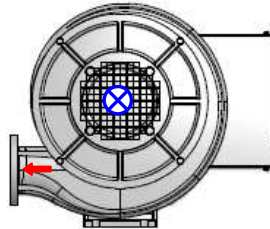


High pressure fan VRH

Designed for FC
Frequency Converter

VRH-FU_class

 VRH25_FU – VRH600_FU

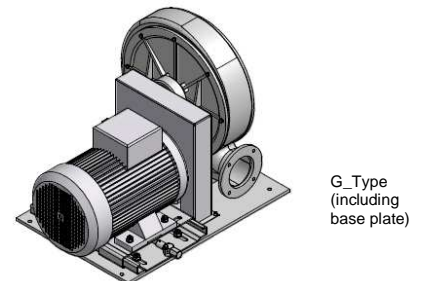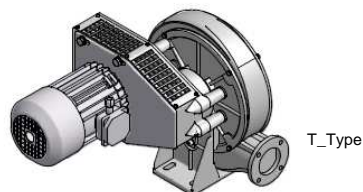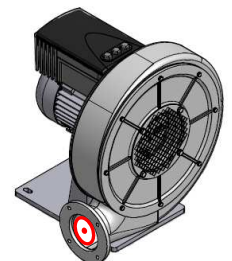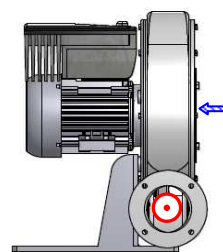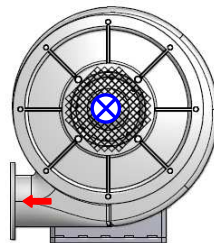

Danger from rotating impeller: Cutting/cutting of off extremities! The rotating impeller is accessible with the inlet and discharge connections open! With free entry and exit of gases, i.e. with direct intake out of or direct feeding into the atmosphere without piping, the following therefore applies:

Provide the inlet and discharge connections of the pump-motor unit either with additional mufflers or with additional piping of a sufficient length to prevent access to the impeller!



Danger from interchanging inlet and pressure line! Interchanged inlet and pressure lines can lead to damage to the pump-motor unit and the system, and as a result of this to serious injuries! Make sure that the inlet and pressure line cannot be confused when connecting. Look for the clear marking with the arrow indicating the delivery direction on the inlet and discharge connections.



Danger due to vacuum and gauge pressure! Danger due to escaping fluid! During operation, connected pipes and vessels are vacuumized or pressurized! Use only mounting elements, connections, lines, fittings and containers with sufficient freedom from leaks and strength for the pressures which occur. Make sure that the mounting elements and connections are mounted sufficiently firmly and leak-free!



Attach pipes/hoses free of mechanical tensions. Support the weight of the pipes/hoses.

6 Commissioning

6.1 Preparation

Measures before start-up:


- ☐ Before starting up the pump-motor unit, observe the values specified on the rating plate. Specifications on the drive-motor nominal current apply at a gas entry and ambient temperature of +45°C.
- ☐ Adjust the motor circuit breaker to the drive-motor nominal current.

Check direction of rotation:

- ☐ The intended rotating direction of the shaft is marked with arrows on the vacuum pump/compressor housing **7**.
- ☐ The gas delivery direction is marked with arrows on the inlet and discharge connections **3** **4**.
- ☐ Make sure the pipes/hoses on the inlet and discharge connections are properly connected.
- ☐ Switch the pump-motor unit on briefly and then off again.
- ☐ Compare the actual rotating direction of the external fan with the intended shaft rotating direction indicated with the arrows shortly before the pump-motor unit comes to a standstill.
- ☐ If necessary, reverse the direction of rotation of the motor.



Check direction of rotation:

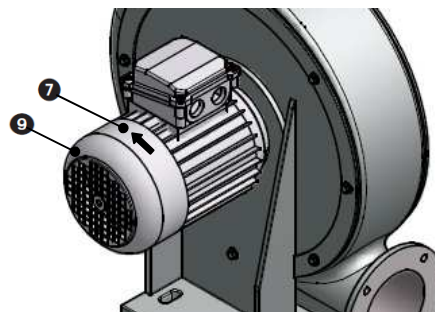

Electrical danger! The electrical connection may be carried out by trained and authorized electricians only!

Electrical danger! Before beginning work on the unit or system, the following measures must be carried out:

- ☐ Deenergize.
- ☐ Secure against being switched on again.
- ☐ Determine whether deenergized.
- ☐ Ground and short-circuit.
- ☐ Cover or block off adjacent energized parts.



Check operating speeds:

Observe the operating speed specified on the rating plate. This may not be exceeded, as otherwise the noise radiation, vibration behavior, grease consumption duration and bearing change interval worsen. To prevent damage as a result of higher speeds, it may be necessary to inquire with the Service Department as to the maximum speed.



Danger of hearing damage due to noise radiation! However, the actual noise emission during operation is highly dependent on the installation and system conditions. Conduct a noise measurement in the system during operation after installing the pump-motor unit. The following measures can be taken from 85 dB(A) and must be taken from 90 dB(A):

- ☐ Mark noise area with a warning sign.
- ☐ Wear hearing protection.
- ☐ With free entry and exit of gases, i.e. with direct intake out of or direct feeding into the atmosphere without piping, attach an additional muffler.

6.2 Start-up and shut-down

Start-up:

- ☐ Switch on power supply for drive motor.

Shut-down:

- ☐ Switch off power supply for drive motor.

7 Operation



Improper use of the unit can result in serious or even fatal injuries!

Have you read the safety precautions in Chapter 1? Otherwise you may not carry out any work with or on the pump-motor unit! Also **be sure** to read the safety precautions in Chapter 6!



Danger of burns from hot surfaces of the pump-motor unit and from hot fluids!

High temperatures of up to approx. 160°C [320°F] can occur on the surface of the pump motor unit. Do not touch during operation! Allow to cool after shut-down!



Danger of overheating due to hot surface of pump-motor unit!

High temperatures of up to approx. 160°C [320°F] can occur on the surface of the pump motor unit. Temperature sensitive parts, such as lines or electronic components, may not come into contact with the surface of the pump-motor unit.



Danger of overheating! During operation the standstill heating may, if installed, not be switched on!



Danger of rusting due to collection of condensed water in drive motor area!

On drive motors with closed condensed water openings:
Remove closures occasionally to allow any water which has collected to drain off.

Danger of bearing damage!

Heavy mechanical impacts must be avoided during operating and while at a standstill.



8 Shut-down and longer standstills

8.1 Preparing for shut-down or longer standstill



Danger of rusting due to collection of condensed water in drive motor area!

On drive motors with closed condensed water openings:

Remove closures occasionally to allow any water which has collected to drain off.

Danger of bearing damage! Avoid mechanical shocks during operation and shut-down.

Prior to shut-down or longer standstill, proceed as follows:

- ☐ Switch off the pump-motor unit.
- ☐ Disconnect pump-motor unit from power supply.
- ☐ Release pressure. When doing so, open pipes/hoses slowly and carefully so that the vacuum or gauge pressure in the pump-motor unit can be released.
- ☐ Remove pipes/hoses.
- ☐ Provide the inlet and discharge side with sealing plugs.

8.2 Storage conditions

To prevent standstill damage during storage, the environment must provide the following conditions:

- ☐ dry,
- ☐ dust-free,
- ☐ low-vibration.
- ☐ ambient temperature:
 - min. -30°C [-22°F]
 - max. 40°C [+104°F].

Lubrication of rolling bearings after longer storage:

The new pump-motor unit may at first be stored following delivery. If the time from deliver to commissioning exceeds the following periods, the lubrication of the rolling bearings must be renewed:

- ☐ Under advantageous storage conditions (as specified above): 4 years.
- ☐ Under disadvantageous storage conditions (e.g. high humidity, salty air, sandy or dusty air): 2 years.

In these cases open rolling bearings must be relubricated and closed rolling bearings must be completely replaced. In this case be sure to inquire with the service department. In particular, exact information with regard to the procedure and grease type is required.



Improper use of the unit can result in serious or even fatal injuries!

All maintenance work on the pump-motor unit must always be performed by the service department!

Maintenance work on the pump-motor unit may only be conducted by the operator itself when the related **maintenance manual** on hand! Inquire with the service department! (**service@wetravent.com**).

Commissioning after longer standstill:

Before recommissioning after a longer standstill, measure the insulation resistance of the drive motor. With values $\leq 1 \text{ k}\Omega$ per volt of nominal voltage, the winding is too dry.



9 Servicing



Improper use of the unit can result in serious or even fatal injuries!

All maintenance work on the pump-motor unit must always be performed by the service department!
Maintenance work on the pump-motor unit may only be conducted by the operator itself when the related maintenance manual on hand!

Inquire with the service department! (service@wetravent.com).

service@wetravent.com



9.1 Emptying / rinsing / cleaning

Before any maintenance/servicing work, empty, rinse and clean the outside of the unit.

- ☐ Empty unit with air and rinse until all residues have been removed.
- ☐ Clean the outside of the unit with compressed air.
 - Wear gloves and protective safety glasses.
 - Secure the surrounding area.
 - Clean the entire surface of the unit and exterior fan with compressed air.



9.2 Repairs / troubleshooting

Fault	Cause	Remedy	Carried out by
Motor does not start; no motor noise.	At least two power supply leads interrupted.	Eliminate interruption by fuses, terminals or power supply cables.	Electrician
Motor does not start; humming noise..	One power supply lead interrupted.	Eliminate interruption by fuses, terminals or power supply cables.	Electrician
	Impeller is jammed.	Open vacuum pump/compressor cover, remove foreign body, clean.	Service ^{*)}
		Check or correct impeller gap setting if necessary.	Service
	Impeller defective.	Replace impeller.	Service ^{*)}
	Rolling bearing on drive motor side or vacuum pump/compressor side defective.	Replace motor bearing or vacuum pump/compressor bearing.	Service ^{*)}
Protective motor switch trips when motor is switched on. Power consumption too high.	Winding short-circuit.	Have winding checked.	Electrician
	Motor overloaded. Throttling does not match specification on rating plate.	Reduce throttling.	Service ^{*)}
		Clean filters, mufflers and connection pipes if necessary.	Service ^{*)}
	Compressor is jammed.	See fault: "Motor does not start; humming noise." with cause: "Impeller is jammed.".	Service ^{*)}
Pump-motor unit does not generate any or generates insufficient pressure difference.	Leak in system.	Seal leak in the system.	Operator
	Wrong direction of rotation.	Reverse direction of rotation by interchanging two connecting leads.	Electrician
	Incorrect frequency (on pump-motor units with frequency converter).	Correct frequency.	Electrician
	Shaft seal defective.	Replace shaft seal.	Service ^{*)}
	Different density of pumped gas.	Take conversion of pressure values into account. Inquire with Service Department.	Service
	Change in blade profile due to soiling.	Clean impeller, check for wear and replace if necessary.	Service ^{*)}
Abnormal flow noises.	Flow speed too high.	Clean pipes. Use pipe with larger cross-section if necessary.	Operator
	Muffler soiled.	Clean muffler inserts, check condition and replace if necessary.	Service ^{*)}
Abnormal running noise.	Ball bearing lacking grease or defective.	Regrease or replace ball bearing.	Service ^{*)}
Compressor leaky.	Seals on muffler defective.	Check muffler seals and replace if necessary.	Service ^{*)}
	Seals in motor area defective.	Check motor seals and replace if necessary.	Service



9.3 Service / after-sales service

Our service is available for work (in particular the installation of spare parts, as well as maintenance and repair work), not described in these operating instruction. (service@wetravent.com).

Observe the following when returning pumpmotor unit:

- ☐ The pump-motor unit must be delivered complete, i.e. not dismantled.
- ☐ The pump-motor unit may not present a danger to the workshop personnel. Each pump motor unit on delivery to the workshop must be accompanied with a fully completed "Statement on health safety and on the protection of the environment".
- ☐ The original rating plate of the pump-motor unit must be properly mounted, intact and legible. All warranty claims are voided for pump-motor units delivered for a damage expertise without the original rating plate or with a destroyed original rating plate.
- ☐ In case of warranty claims, WETRAVENT must be informed of the operating conditions, operating duration etc. and additional detailed information provided on request if necessary.

10 Disposal

Have the entire pump-motor unit scrapped by a suitable disposal company. No special measures are required when doing so. For additional information on disposing of the unit, ask the service department. (service@wetravent.com).


(*) **WETRAVENT Lufttechnik**
Abt. Service
Albstr. 10
73765 Neuhausen a.d.F.
Tel.: 0049 (0) 7158-98 775-97
service@wetravent.com
www.wetravent.com



Low pressure fan VRN

VRN_class

VRN3 – VRN92

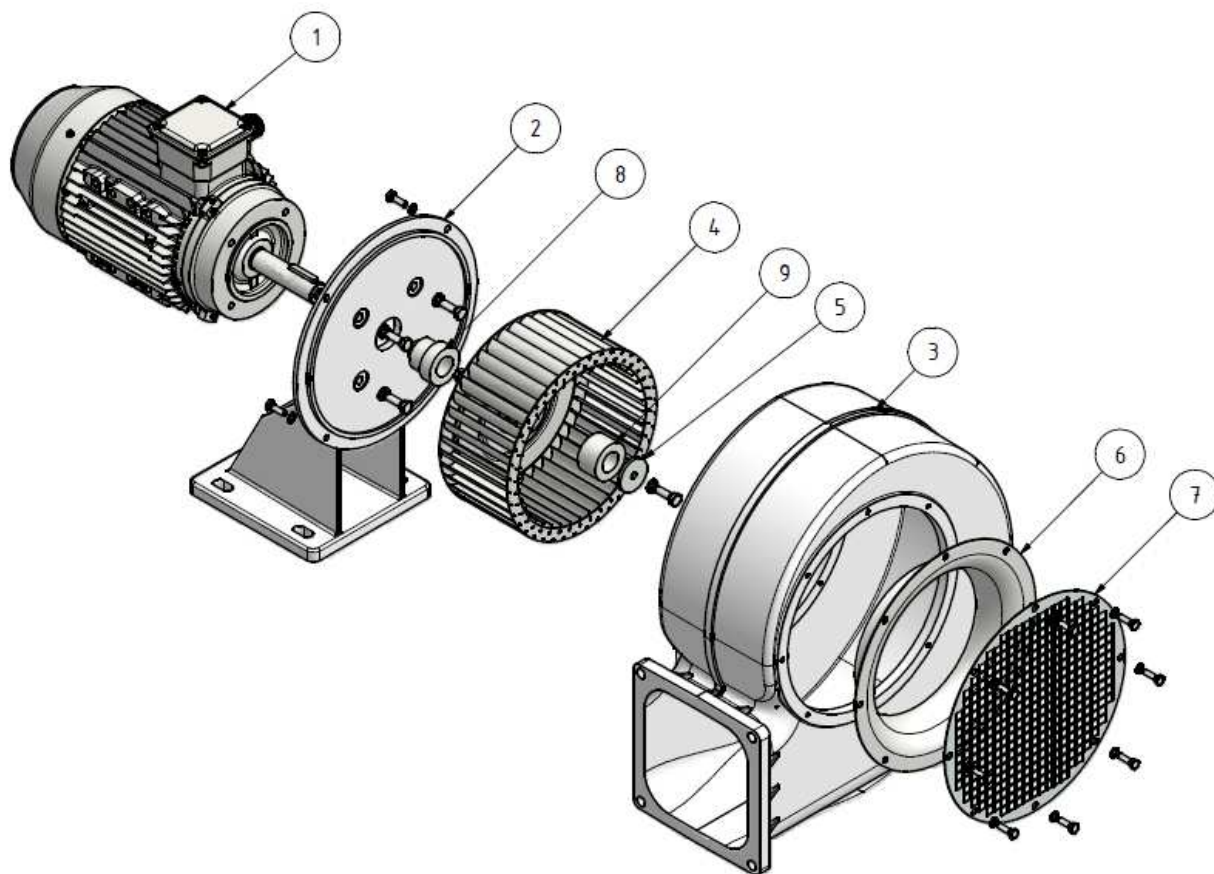

Pos.	Menge	Einheit	Benennung	Sachnummer / Norm - Kurzbezeichnung	Bemerkungen
1	1			Motor komplett	
2	1			Motorflansch (Ventilatorfuß)	
3	1			Ventilatorgehäuse	
4	1			Ventilatorrad	
5	1			Nabensicherung f. Ventilatorrad	
6	1			Einströmdüse	
7	1			Ansaugschutzgitter	
8	1			Distanzbüchse 1	
9	1			Distanzbüchse 2	




Medium pressure fan VR

VR_class
VR100 – VR850

High pressure fan VRH-FU
Designed for FC
Frequency Converter

VRH-FU_class
VRH25_FU – VRH600_FU

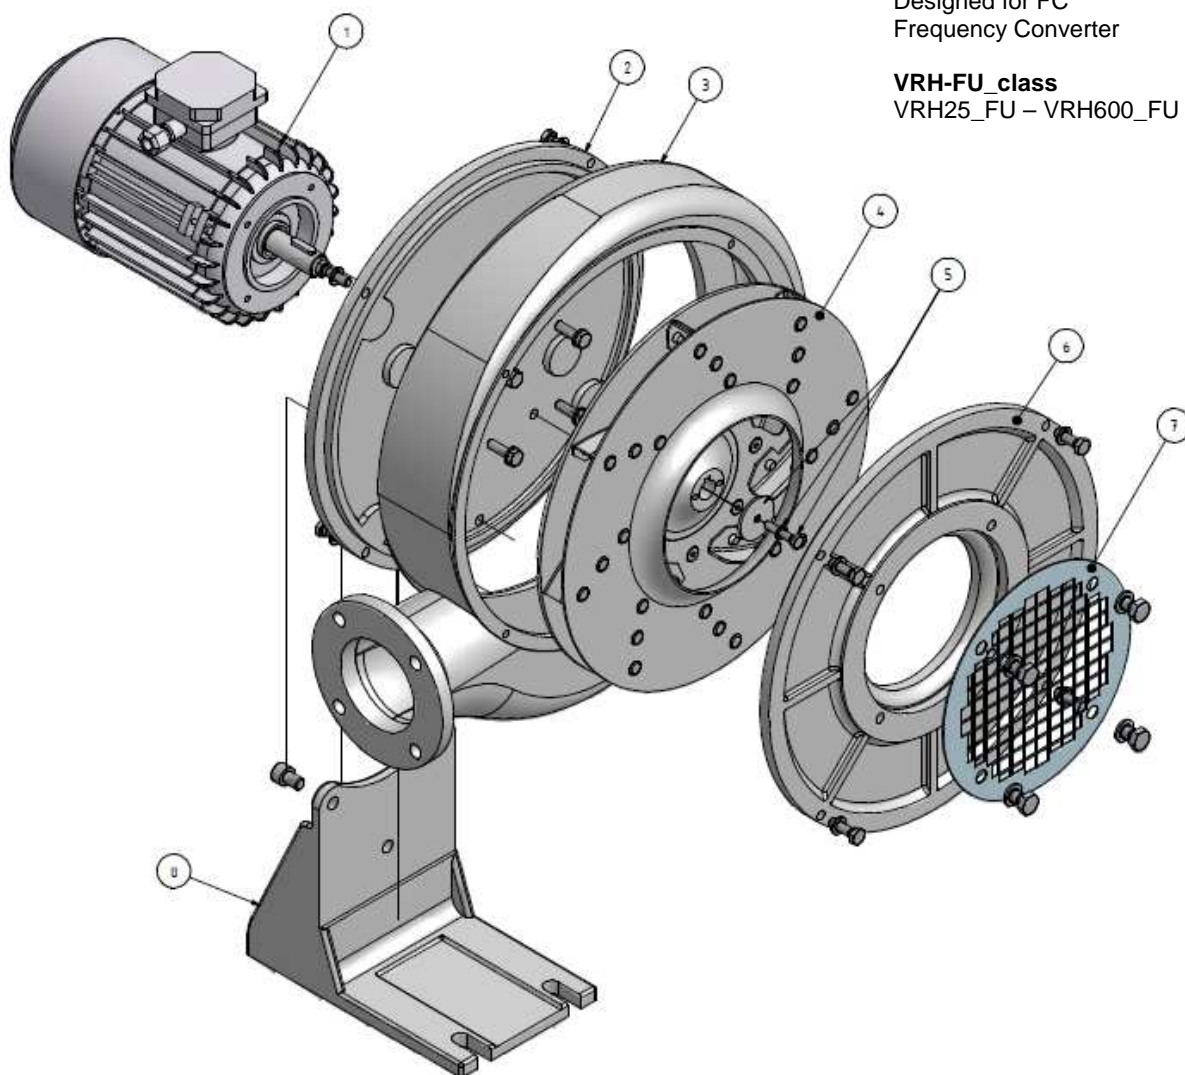

Pos.-Nr.	Anzahl	Bezeichnung	
1	1	Motor komplett	
2	1	Motorflansch	
3	1	Ventilatorgehäuse	
4	1	Ventilatorrad	
5	1	Nabensicherung für Laufrad	
6	1	Ansaugdeckel	
7	1	Ansaugschutzgitter	
8	1	Ventilatorfuß	z.Teil optional




High pressure fan VRH


Designed for V-belt drive

VRH_class T-Type

VRH25_T – VRH400_T

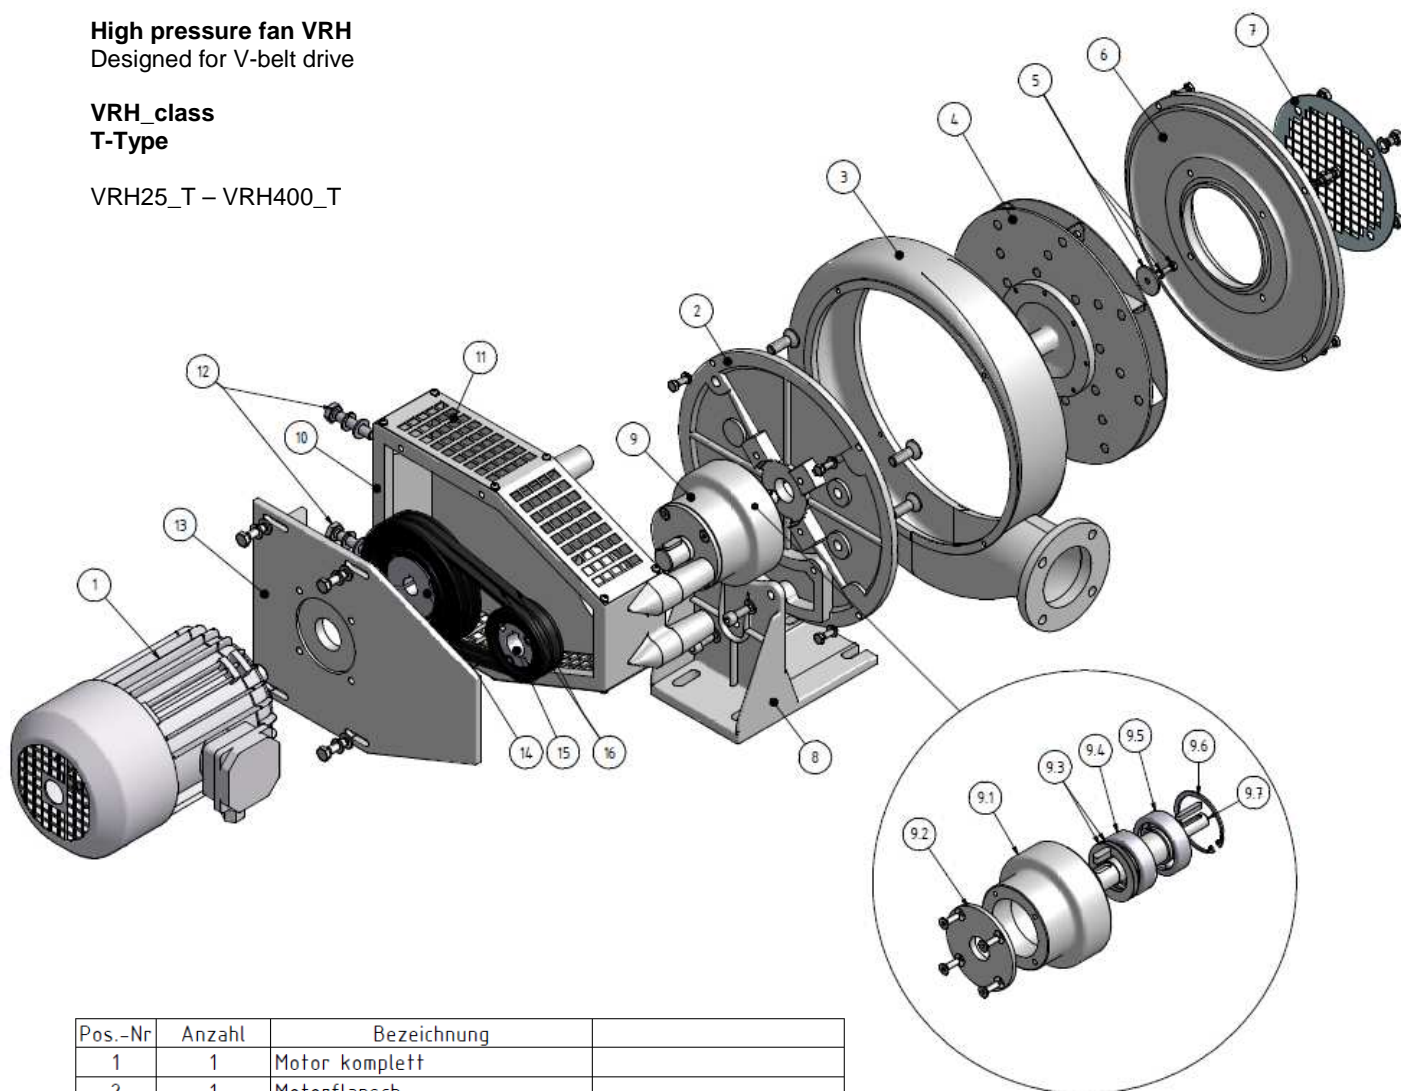

Pos.-Nr	Anzahl	Bezeichnung	
1	1	Motor komplett	
2	1	Motorflansch	
3	1	Ventilatorgehäuse	
4	1	Ventilatorrad	
5	1	Nabensicherung für Laufrad	
6	1	Ansaugdeckel	
7	1	Ansaugschutzgitter	
8	1	Ventilatorfuß	
9	1	Lagergehäuse komplett	
9.1	1	Lagergehäuse	
9.2	1	Abschlußdeckel	
9.3	2	Tellerfeder	
9.4	1	Rillenkugellager	
9.5	1	Rillenkugellager	
9.6	1	Sicherungsring	
9.7	1	Antriebswelle	
10	1	Flanschgehäuse	
11	2	Abdeckgitter	
12	2	Stellschraube für Keilriemen	
13	1	Deckel Flanschgehäuse	
14	1	Riemenscheibe 1	
15	1	Riemenscheibe 2	
16	2	Keilriemen XPZ - 612	


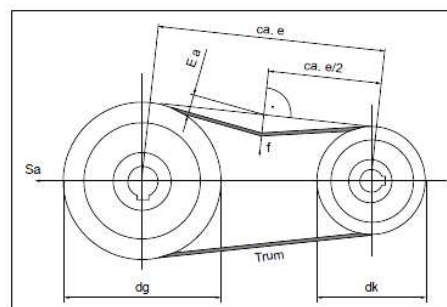




High pressure fan VRH Designed for V-belt drive

VRH_class G-Type



VRH100_G – VRH400_G
(including base plate)

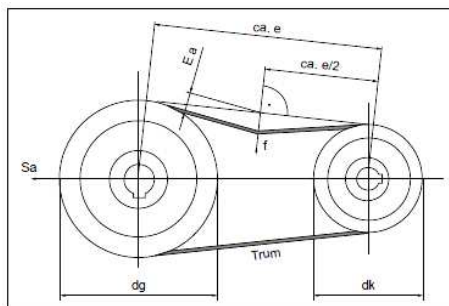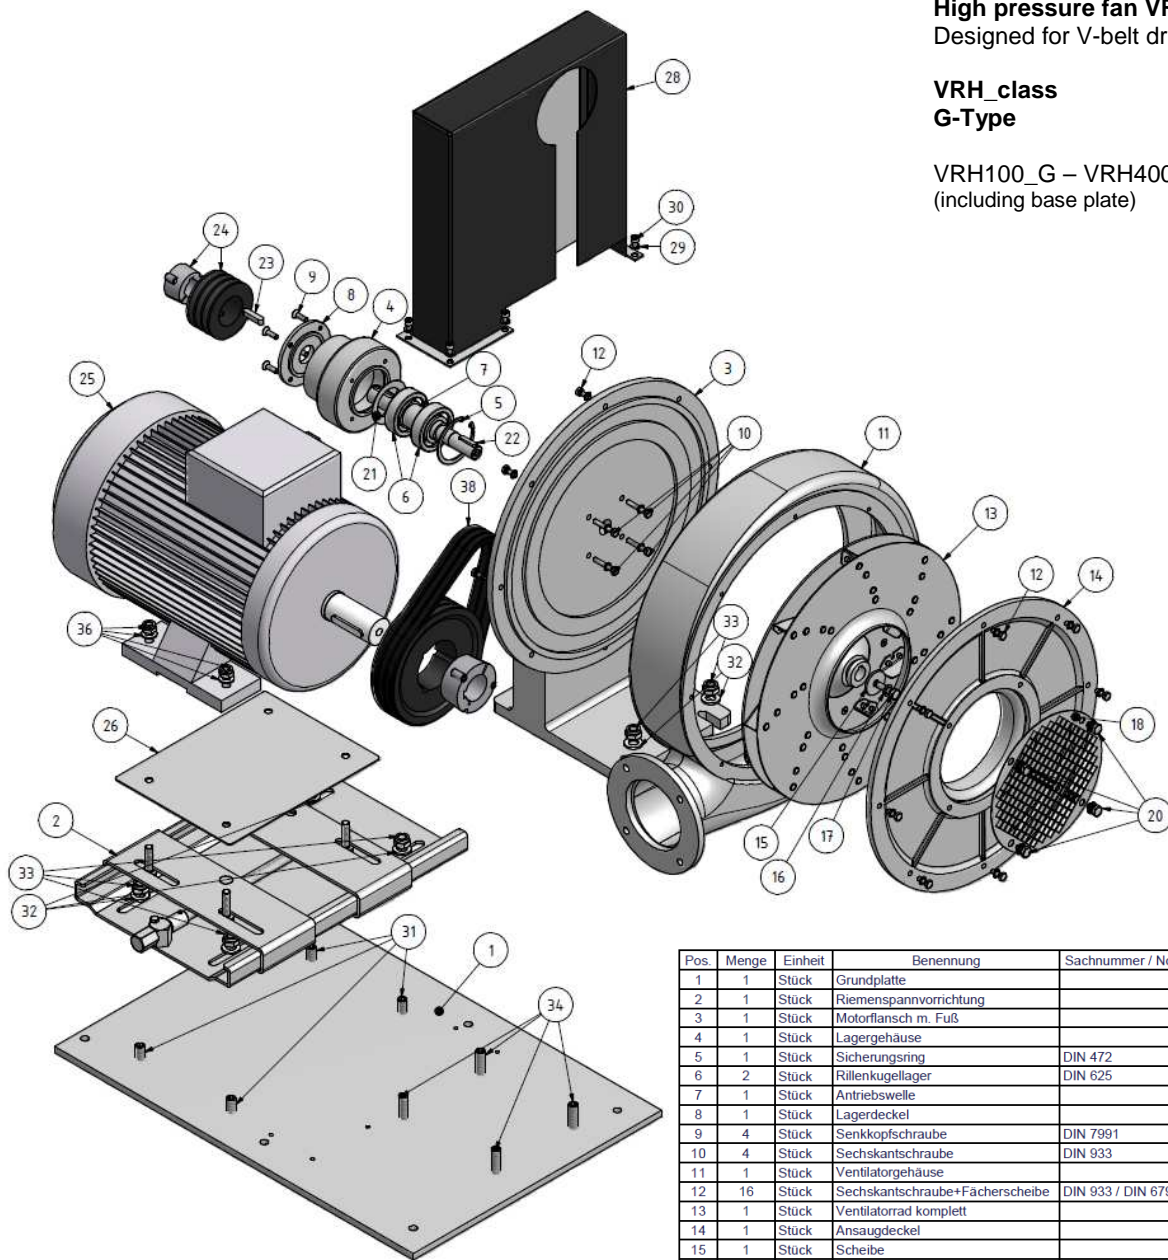

Pos.	Menge	Einheit	Benennung	Sachnummer / Norm - Kurzbezeichnung
1	1	Stück	Grundplatte	
2	1	Stück	Riemenspannvorrichtung	
3	1	Stück	Motorflansch m. Fuß	
4	1	Stück	Lagergehäuse	
5	1	Stück	Sicherungsring	DIN 472
6	2	Stück	Rillenkugellager	DIN 625
7	1	Stück	Antriebswelle	
8	1	Stück	Lagerdeckel	
9	4	Stück	Senkkopfschraube	DIN 7991
10	4	Stück	Sechskantschraube	DIN 933
11	1	Stück	Ventilatorgehäuse	
12	16	Stück	Sechskantschraube+Fächerscheibe	DIN 933 / DIN 6798
13	1	Stück	Ventilatorrad komplett	
14	1	Stück	Ansaugdeckel	
15	1	Stück	Scheibe	
16	1	Stück	Federring	DIN 127
17	1	Stück	Sechskantschraube	DIN 933
18	1	Stück	Ansaugschutzgitter	
19	4	Stück	Fächerscheibe	DIN 6798
20	4	Stück	Sechskantschraube	DIN 933
21	2	Stück	Wellenfeder	
22	1	Stück	Passfeder	DIN 6885 A
23	1	Stück	Passfeder	DIN 6885 A
24	1	Stück	Riemenscheibe m. Nabe	
25	1	Stück	Motor komplett	
26	1	Stück	Zwischenplatte	
27	1	Stück	Riemenscheibe m. Nabe	
28	1	Stück	Riemenschutz	
29	5	Stück	Federring	DIN 127
30	5	Stück	Innensechskantschraube	DIN 912
31	4	Stück	Gewindestift	DIN 913
32	8	Stück	Unterlegscheibe	DIN 125-1
33	8	Stück	Sicherungsmutter	DIN 985
34	4	Stück	Gewindestift	ISO 4026
35	4	Stück	Sechskantschraube	DIN 933
36	4	Stück	Sicherungsmutter+Unterlegscheibe	DIN 985 / DIN 125-1
38	3	Stück	Keilriemen	



Variations and Possibilities of Installation

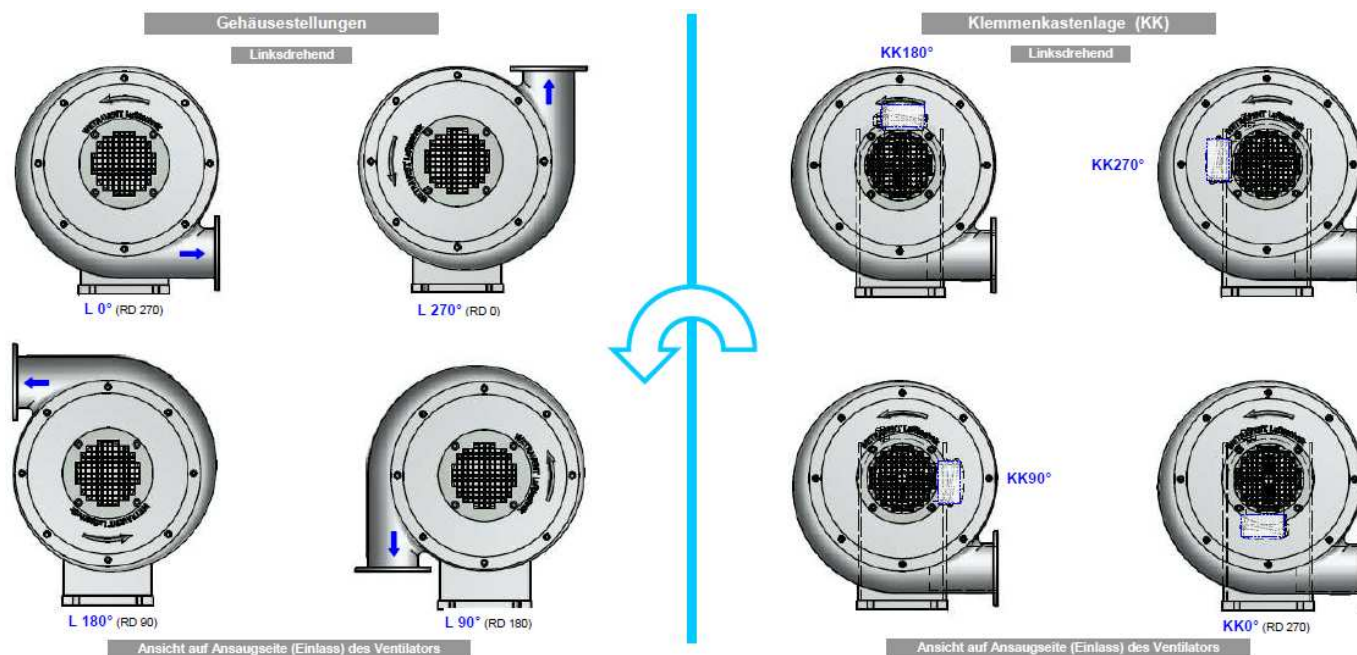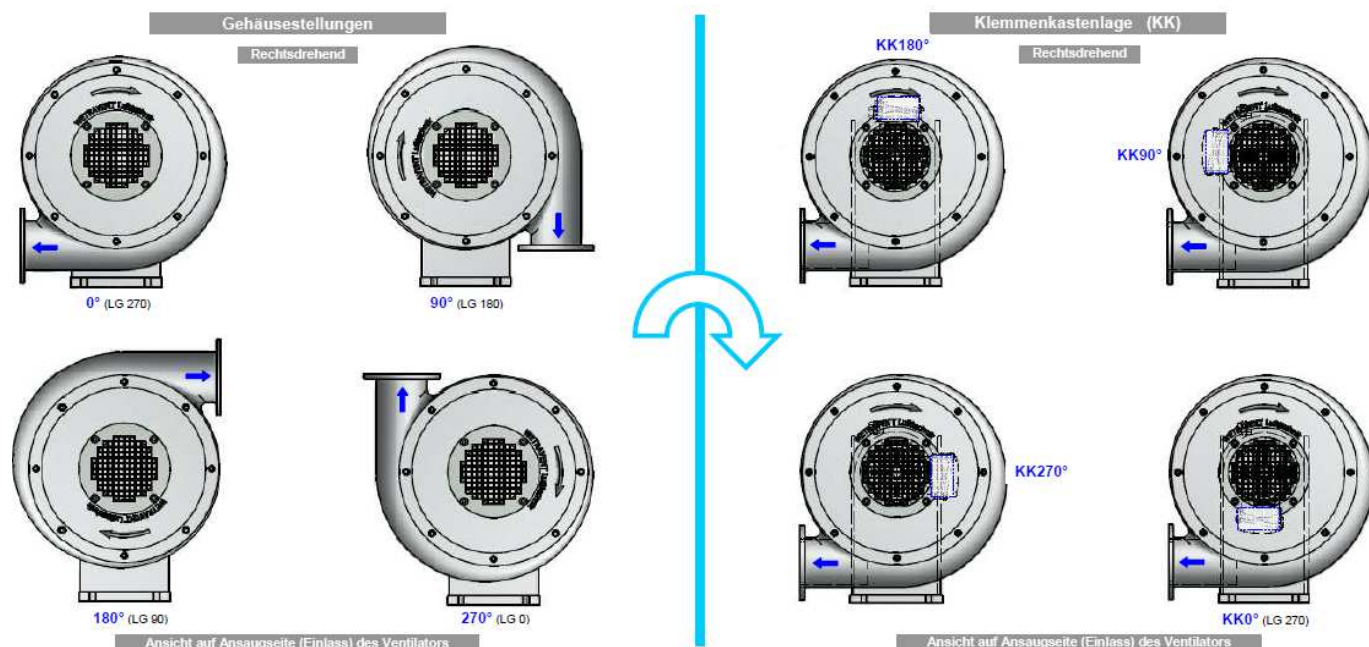



WETRAVENT Lufttechnik
Diana Werner
Albstr. 10
D-73765 Neuhausen a.d.F.
Germany

Responsible for documentation:
Albrecht Mayer
Albstr. 10
D-73765 Neuhausen a.d.F.

EU declaration of conformity

Designation: Centrifugal fans VR_venetus (venetus class)
Typen Low Pressure VRN3 – VRN92
Typen Medium Pressure VR100 – VR850
Typen High Pressure VRH25_FU – VRH600_FU
Typen High Pressure VRH25_T – VRH400_T
Typen High Pressure VRH100_G – VRH400_G

The side channel blower described above meets the following applicable Community harmonisation legislation:

2006/42/CE Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC

2006/95/CE Directive 2004/108/EC of the European Parliament and of the Council on the approximation of the laws of the Member States relating to electromagnetic.

Standards applied:

EN 1012-1: 1996 Compressors and vacuum pumps - Safety requirements - Part 1: Compressors

EN 1012-2: 1996 Compressors and vacuum pumps - Safety requirements - Part 2: Vacuum pumps

WETRAVENT Lufttechnik
D-73765 Neuhausen a.d.F. / Germany
01.10.2010

Bernd Glocker
Développement et construction
Senior Manager R&D

Diana Werner
Direction
CEO

WETRAVENT Lufttechnik
D-73765 Neuhausen a.d.F.
Germany
Tel.: 0049-(0) 7158-9877-598
Fax: 0049-(0) 7158-9877-599
24h: 0049-(0) 173-955 81 80
Mail: service@wetravent.com
www.wetravent.com

